



# Disassembling UPS OVISLINK TRACITE CUBE or CUBO All

Opening the Ovislink Tracite 800 CUBO UPS to change the battery or it's fuse. Easy to do when you know how... but no public guide or manual from it's constructor...

Written By: pldestin



## INTRODUCTION

Opening the Ovislink Tracite 800 CUBO UPS to change the battery or it's fuse.

Easy to do when you know how... but no public guide or manual from it's constructor...

First of all... SET THE UPS OFF and UNPLUG IT from main.



### TOOLS:

- [4mm Phillips Screwdriver](#) (1)



### PARTS:

- [sealed lead battery 12V 7Ah](#) (1)




## Step 1 — Unscrew the front panel




- Remove the screws (2) under the device

## Step 2 — Open the front panel

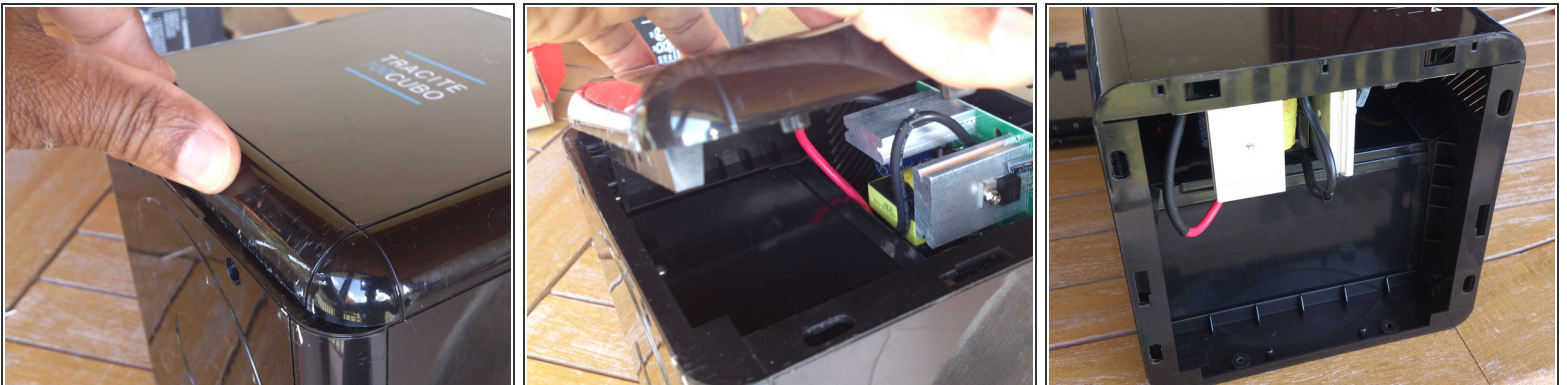


- Slide the front pannel up

### Step 3 — Remove the Bottom panel

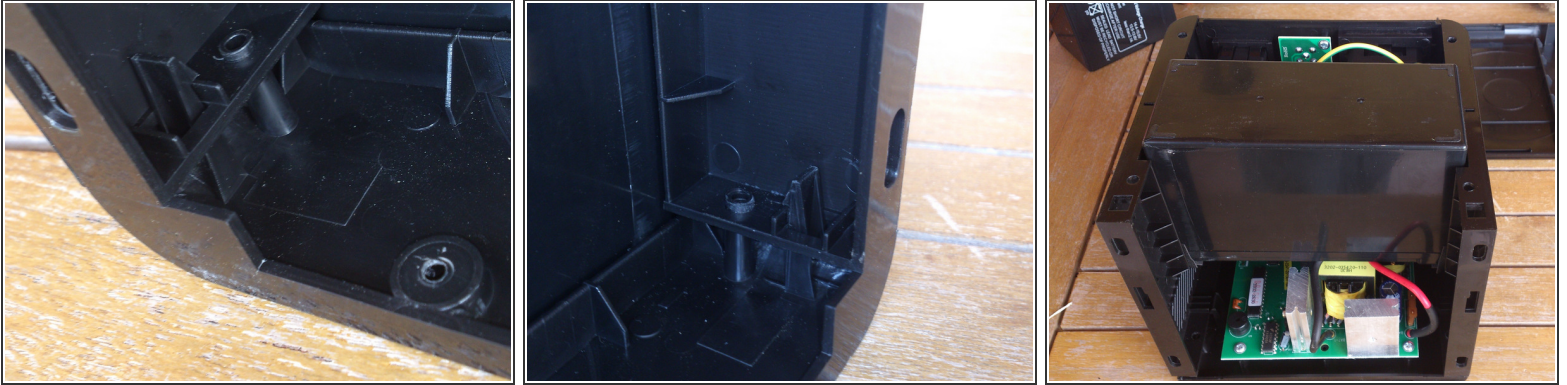

- Remove left/right clips. And remove the bottom panel




### Step 4 — Remove the Battery

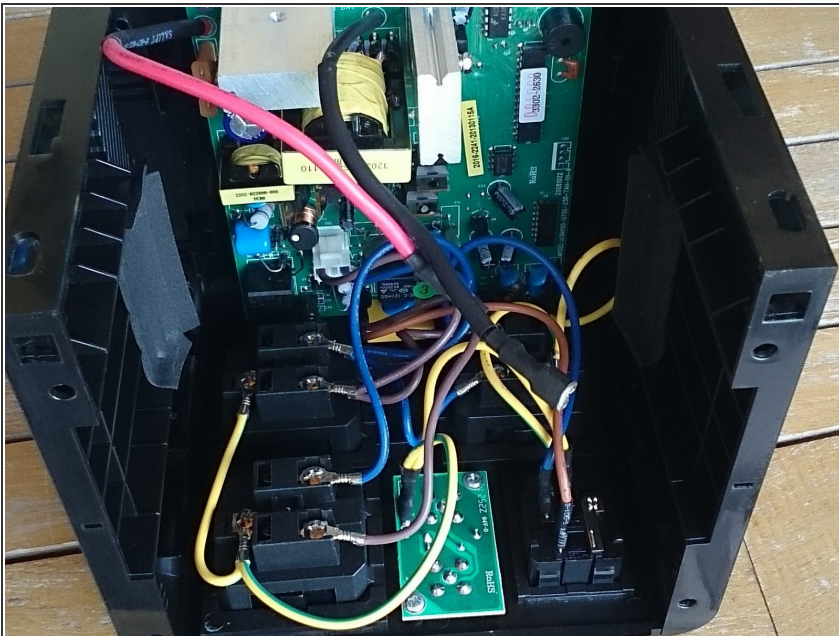

- Be careful





## Step 5 — Remove the left side

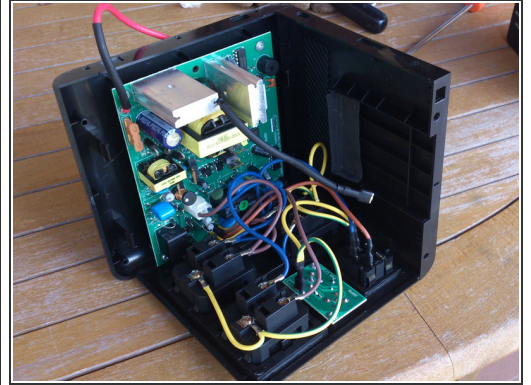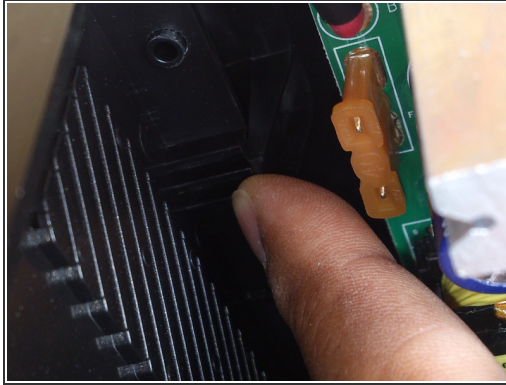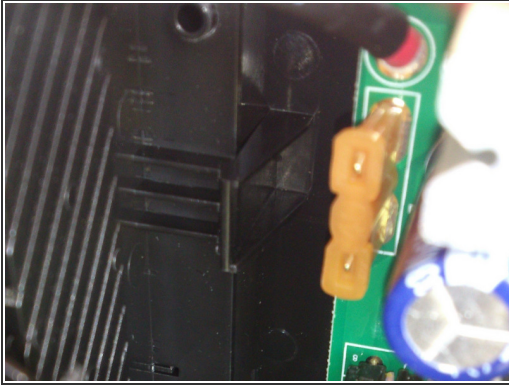


- Unclip the left pannel

## Step 6 — Remove the right side

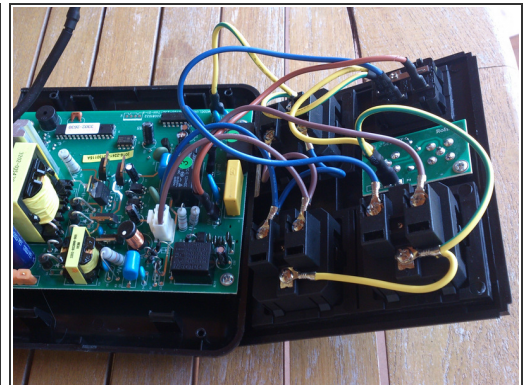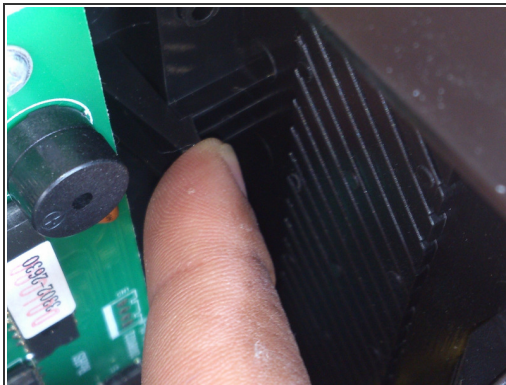

- Unclip the right pannel

## Step 7 — Remove the rear panel

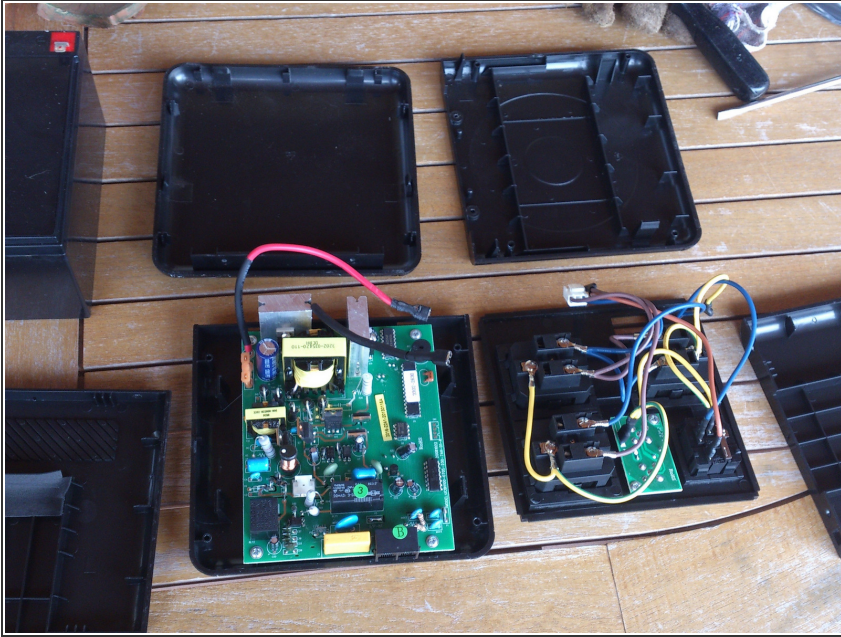

- Caution when plugging the rear panel...
- -blue for neutral.
- -yellow/green for earth
- -brown for phase

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 02:44:46 AM.